1200W STEAM / SPRAY IRON

Model Number: IG3112

INSTRUCTIONS FOR USE

Thank you for purchasing this product.
Please read these instructions carefully before use

Trouble with your iron? …

Try our troubleshooting guide on page 5.

If that does not solve the issue contact us …

Tel: 01473 271 272 **Fax:** 01473 270 733
Email: info@igenix.co.uk **Website:** www.igenix.co.uk

Postal Address:
Customer Service Department
Pik-a-Pak Electrical Distributors
38 Bluestem Road,
Ransomes Europark,
Ipswich, IP3 9RR

When writing or emailing us to report a fault please ensure you attach a copy of your proof of purchase. Please retain your original

SAFETY INSTRUCTIONS

Important: This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Please read all instructions carefully before using the iron for the first time.
- Before plugging in the iron, check if the voltage indicated on the rating label corresponds with the main voltage in your home.
- Do not use the iron for anything other than its intended use.
- The iron should always be switched off with the temperature control dial before connecting or disconnecting from the power supply.
- Do not pull on the cord to disconnect the plug from the wall socket.
- Do not use the iron if the power cord or plug is damaged. Do not replace the power cord or any other parts yourself.
- When you have finished ironing, or when leaving the iron unattended, turn the steam control switch to the off position and the temperature control dial to its minimum setting. Unplug from the mains power supply.
- Always stand the iron upright and disconnect from the power supply when not in use.
- Do not allow children to touch the iron or power cord when ironing.
- Do not immerse the iron or cord in water or any other liquid.
- Do not touch hot metal parts, hot water or steam as this may cause burning. Take care if you turn the iron upside down, there may be hot water in the tank.
- The plug and cord should not be allowed to touch the soleplate. Let the iron cool down completely before putting it away.
- Disconnect the iron from the power socket while filling with water or emptying after use.
- This iron is for household use only.
- When placing the iron on its stand, ensure the surface on which the stand is placed is stable.
- The iron should not be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Children should not be allowed to play with the iron.
- Some parts of the iron may have been slightly greased and so the iron may smoke slightly when switched on for the first time. Clean the soleplate with a soft cloth.
- Before ironing for the first time, test the iron using an old piece of fabric to ensure the soleplate and water tank are completely clean.
- Travelling irons are not meant for regular use.

SPECIFICATION

Supply Voltage:	220-240V ~ 50Hz
Maximum Output:	1200W

CE Marking certifies that this appliance confirms to the following EEC directives:
Low Voltage Equipment – 72/23/EEC & 93/68 EEC
Electromagnetic Compatibility 89/336/EEC, 92/31/EEC & 93/68/EEC

Disposal of Old Electrical Appliances

The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

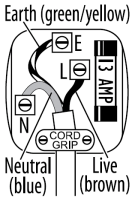

The iron must be earthed. Fit a 13A BS1362 fuse in a 13A BS1363 plug. Fit the green/yellow wire to E, the blue wire to N and the brown wire to L. Fit the cord grip. If in doubt, call an electrician. Don't use a non-rewireable plug unless the fuse cover is fitted. If you remove the plug, dispose of it.

IG3112 –Steam / Spray Iron at a Glance

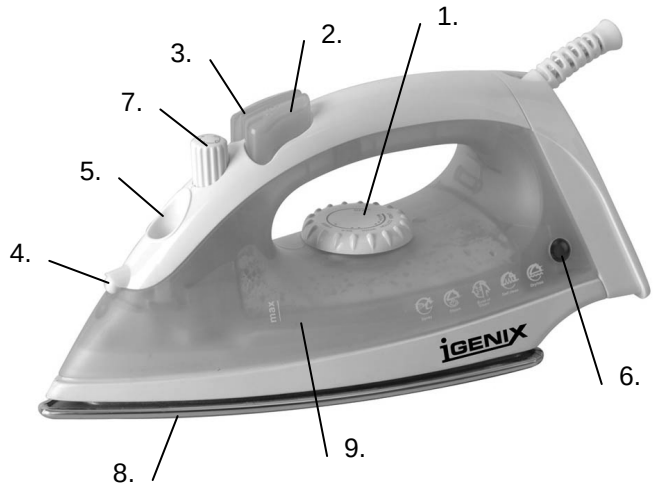

1 – Temperature Control
2 – Burst of Steam Button
3 – Spray Button
4 – Spray Nozzle
5 – Water Fill Aperture
6 – Pilot Light
7 – Steam Control
8 – Sole Plate
9 – Water Tank

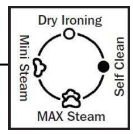

CHOICE OF WATER

- This iron can be used with normal tap water.
- If the water in your area is particularly hard, it is advised that you use distilled or de-mineralized water.
- Do not use chemically descaled water or any other liquids for refilling.

HOW TO FILL WITH WATER

- Unplug the mains lead from the power supply before filling the water tank.
- Set the Steam Control (7) to 'O' and the Temperature Control (1) to the 'OFF' position.
- Pour water into the filling aperture (5), ensuring that you do not fill past the MAX mark.
- After ironing drain the water tank.

SETTING THE TEMPERATURE

- Insert the plug in the power socket and stand the iron upright.
- Turn the temperature control dial (1) to the desired temperature setting.
- When the desired temperature has been reached the pilot light (6) will go out. The pilot light will turn on and off from time to time, indicating that the selected temperature is being maintained.

TEMPERATURE CONTROL SETTING

- Always check the garment label for ironing instructions before ironing the garment. If the label is missing then the table (right) may help you.
- First sort out the laundry; wool with wool, cotton with cotton etc. Start ironing the fabrics requiring the lowest temperature setting and progress to the higher temperature settings because the iron heats up quicker than it cools down.
- If the fabric consists of various kinds of fibres (e.g. cotton with polyester) you must always select the ironing temperature for the material with the lowest advised temperature.
- If the instructions on the fabric label differ from the guide on the right, follow the instructions on the fabric label.

Label	Kind of Textile	Fibre Material
	Synthetic	Acrylic Modacryl Polypropylene Polyurethane
	Synthetic	Acetate Triacetate
	Synthetic	Cupro Polyamide (nylon) Polyester Modal Viscose (Rayon)
	Silk	Silk
	Wool	Wool
	Cotton	Cotton
	Linen	Linen

SPRAYING

This function can be used any time and does not affect the ironing temperature.

- Fill the tank with water as described previously.
- Aim the nozzle towards the garment.
- Press the spray button (3).

STEAM IRONING

- The steam function can only be used at higher ironing temperatures.

  ●● setting for moderate steam
  ●●● setting or ‘MAX’ for maximum steam

- Fill the water tank as previously described.
- Stand the iron upright.
- Plug the iron into a suitable power socket.
- Turn the Temperature Control dial (1) to the ●● setting, or the ●●● setting or ‘MAX’ setting.

  Note: water may leak from the soleplate if the temperature selected is too low. If this happens, turn the temperature control (1) to the advised position for your garment material type. Steam will recommence as soon as the appropriate temperature has been reached.

- When the iron reaches the desired temperature, the pilot light (6) will go out indicating that the iron is ready for use.
- Turn the steam control (7) to the required position and steam will start coming out of the holes in the soleplate.
- Release the steam for a few seconds then start ironing. When using the iron the pilot light will switch on and off indicating the iron is keeping a constant temperature.
- After use turn steam control (7) to the ‘Dry Ironing’ position and turn the Temperature Control (1) to ‘OFF’
- When you have finished ironing disconnect the iron from the mains supply and allow to cool completely before storing away.

BURST OF STEAM

This function provides an extra amount of steam to remove stubborn creases and wrinkles.

- Fill the water tank as previously described.
- Turn the Temperature Control (1) to the ‘MAX’ position.
- When the iron reaches the desired temperature, the pilot light (6) will go out indicating that the iron is ready for use.
- Press the burst of steam button (2) once.
- Steam will penetrate into the garment and will remove the crease and wrinkles.

- Wait a few seconds before pressing the steam button (2) again if there are more creases that need to be removed.

DRY IRONING

- Plug the iron into a suitable power socket.
- Ensure the steam control (7) is turned to the Dry Ironing position.
- Select the setting on the on the Temperature Control (1).
- When the pilot light goes out the iron is ready for use.
- When you have finished ironing disconnect the iron from the mains supply and allow to cool completely before storing away.

STORAGE

- Turn the Temperature Control dial (1) to the 'OFF' position and the Steam Control dial (7) to the 'O' position.
- Disconnect from the plug from the power socket.
- Pour any remaining water out of the water tank.
- Stand the iron in the upright position and let it cool down completely.
- Always store the iron in an upright position.

CARE AND CLEANING

- Turn the Temperature Control dial (1) to 'OFF' and disconnect the iron from the power socket and allow it to cool down completely.
- The casing can be wiped with a damp cloth and polished with a dry cloth.
- Remove dirt spots from the soleplate by using a small amount of vinegar a cloth. Be sure not to scratch the soleplate.
- Never use abrasives to clean the soleplate.
- Keep the soleplate smooth, avoid contact with metal objects.

SAFETY PROTECTIVE CUT-OUT

In the unlikely event of the thermostat failing, the protection cut-out will operate to prevent the iron overheating.

Troubleshooting

If you are having problems with your iron, please use our troubleshooting guide below. If you are unable to resolve the issue using the guide please ring our Customer Service Department on 01473 271 272. Please have the model code, batch number and purchase information available.

Problem	Possible Cause	Solution
The iron does not work.	1. Not properly plugged into the mains wall socket. 2. No electricity in the mains wall socket.	1. Plug in firmly. 2. Check fuse or breaker.
The iron leaks and there is not much steam produced.	1. The thermostat is set too low. 2. The water tank is too full. 3. The water in your area is hard and has caused a mineral deposit build up in the iron.	1. Turn the thermostat to a higher setting. 2. Empty some water out of the water tank. 3. Follow the 'Care and Cleaning' section to remove deposits and consider using de-mineralized water.
The iron does not remove creases.	1. Temperature is set too low for the type of fabric you are ironing. 2. The material is too dry to be ironed.	1. Turn up the thermostat slightly until the iron removes the creases. Do not set the iron temperature higher than what is advised on the garment. 2. Use the spray button to dampen the crease.

Disclaimer
Updates to hardware components are made regularly. Therefore some of the instructions, specifications and pictures in this documentation may differ slightly from your particular situation. All items described in this guide are for illustration purposes only and may not apply to your particular situation. No legal right or entitlements may be obtained from the description made in this manual.

This product is guaranteed for a period of 2 years from the date of purchase against mechanical and electrical defects.
The warranty **does not** cover consumable parts that require replacement under normal use or accessories. This includes filters, belts, and accessory attachments.

1. If a fault develops within 6 months of purchase it should be returned to the place of purchase for exchange.
2. If the fault develops after 6 months and within 24 months of purchase please contact our customer service department 01473 271 272 or write to us at the address detailed below.

Please quote the model number which begins **IG**, the 'Batch Number' beginning **'5'** and give details of the exact fault.

We will then decide whether to repair or replace the item. You will be required to return a copy of your proof of purchase. Please retain your original.

If an item is replaced under guarantee within 2 years, the guarantee for the replacement item will be calculated from the purchase date of the original.

Before calling the Customer Service number please ensure you have checked the Troubleshooting guide.

iGENIX

Tel: 01473 271 272 **Fax:** 01473 270 733
Email: info@igenix.co.uk **Website:** www.igenix.co.uk

Postal Address:
Customer Service Department
Pik-a-Pak Electrical Distributors
38 Bluestem Road,
Ransomes Europark,
Ipswich, IP3 9RR

When writing or emailing us to report a fault please ensure you attach a copy of your proof of purchase. Please retain your original

View the range online at www.igenix.co.uk

Follow us on Twitter
@Igenix_Products